


# Window Button Installation Guide

## Mounting Instructions

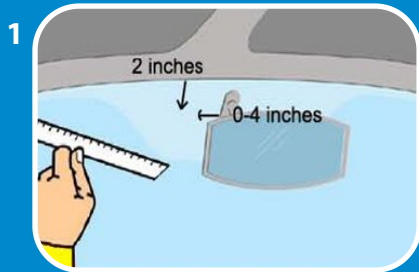

Determine the position of the transponder. Make sure the transponder is placed in a non-metallized area of the windshield.




Clean the inside surface of the windshield.



The suction cup must point out of the vehicle facing the reader, and can not be obstructed.



Firmly press the tag against the glass.

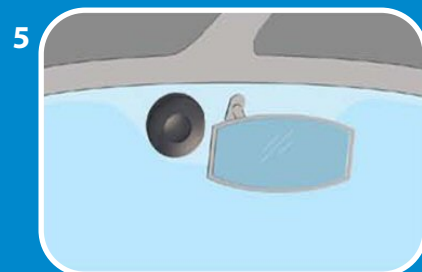

Correctly mounted transponder.



Do not cover the front of the tag with your fingers as it will cause the transponder to not operate properly.

### Important notes!

Vehicle with a metallized windshields (also called solar control coatings) have a non-metallized communication window, behind and on either side of the rear view mirror, of the vehicle. For more specific information please contact your vehicle owners manual or contact your dealership. Compliance with this instruction is important and strongly recommended in order to ensure proper operation of the system

Change without prior notice/ version 2.0\_English

Represented by:

NEDAP N.V. Automatic Vehicle Identification - PO Box 103 - NL-7140 AC Groenlo  
T: +31 (0) 544 471 666 - F: +31 (0) 544 464 255 - E: info-avi@nedap.com

[www.nedapavi.com](http://www.nedapavi.com)